 
 
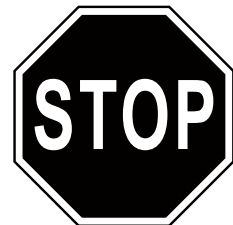 


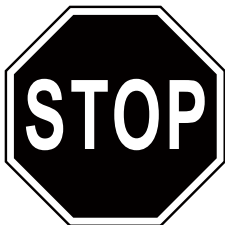

Official Website of KICK Foosball Tables

KICK Pentacle Black MULTI GAME 5 IN 1 GAME TABLE ASSEMBLY INSTRUCTIONS

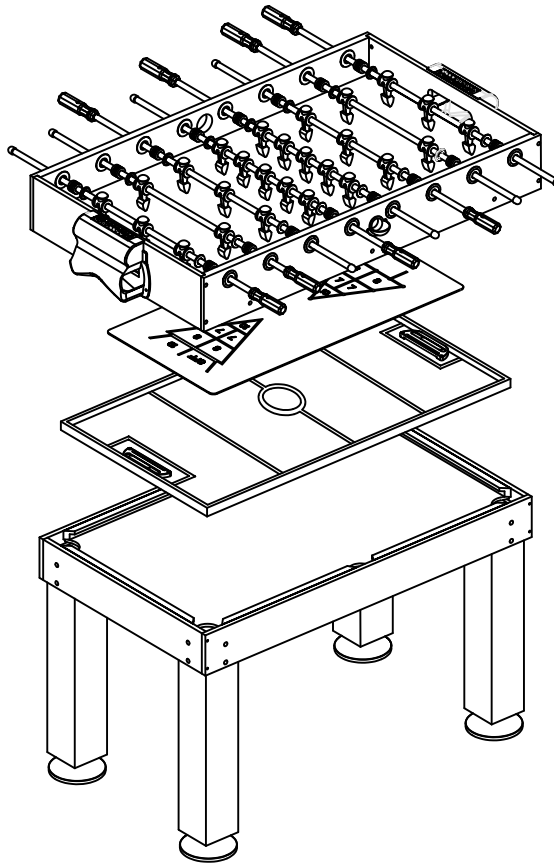

Official Website of KICK Foosball Tables

IF YOUR TABLE HAS DAMAGES, MISSING PARTS, OR YOU ARE NOT **100%** SATISFIED PLEASE CONTACT **KICK, NOT THE RESELLER.**

FOR THE MOST CURRENT INSTRUCTION MANUALS AND ASSEMBLY VIDEOS, PLEASE VISIT OUR WEBSITE OR CONTACT **KICK.**

CONTACT INFORMATION:

Email: support@kickfoosballtables.com
Website: www.kickfoosballtables.com
Phone: 1-866-844-5425

MAILING ADDRESS:

KICK Sports
PO Box 790311
San Antonio, Texas 78279

FMG552

THANK YOU!

Thank you for purchasing this product. We work around the clock and around the globe to ensure that our products maintain the highest possible quality. However, in the rare case of issues during assembly or use of this product. Please contact our consumer hotline at **1-866-844-5425** for immediate assistance. Please read the warranty information at the back of these assembly Instructions for further details.

ASSEMBLY TIPS

IMPORTANT! PLEASE READ THESE ASSEMBLY INSTRUCTIONS IN ENTIRETY BEFORE ASSEMBLING YOUR PRODUCT.

1. Find a clean, level surface to begin the assembly of your game table. We recommend that two adults work together to assemble this game. You may want to carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.
2. Remove all of the contents from box and verify that you have all of the parts shown on the Parts List before you begin assembly. **Note: Some parts may be pre-installed or pre-assembled.**
3. Some figures or drawings may not look exactly like product.
4. ***When installing parts that have more than one screw or bolt, hand tighten all screws or bolts in place before final tightening with screwdriver or wrench.***
5. Electric screwdrivers may be helpful during assembly; however, please set a **low torque** and use extreme caution because screws may be stripped or overtightened, resulting in damaged parts, if the electric screwdriver's torque is set too high.

 
 
 
 
 
 
 


 

 
 
 
 

 
 
 
 
 

 
 

 
 
 

 

 
 
 
 
 
 
 

WARNINGS!

 
 
 
 
 
 
 
 
 

 
 
 
 
 
READ AND FOLLOW ALL ASSEMBLY, OPERATION AND SAFETY INSTRUCTIONS CAREFULLY.

**CHOKER HAZARD - THIS ITEM MAY CONTAIN SMALL BALLS AND PARTS
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE.**


CARE AND USE

1. This product is intended for **INDOOR** use only.
2. Do **NOT** drag the table when moving it, as this will damage it.


1  SIDE PANEL X2	2  END PANEL X2	3  HOCKEY X1	4  PLAYFIELD X1	5  LEG X4	6  SHUFFLEBOARD /BOWLING TOP X1	7  BILLIARD TABLE X1
8  SUPPORT BRACE X3	9  SUPPORT ROD X3	10  PUCK X2	11  STRIKER X2	12  SORT OF BOWLING PINS X1	13  BOWLING BALL X1	14  PUCKS X6
15  BALL ENTRY CUP X2	16  STOP RING X4	17  TRANGLE BOARD X4	18  ROD HANDLE X8	19  ROD END CAP X8	20  ROD BUMPER X16	21  ROD WASHER X16
22a  PLAYER X13	22b  PLAYER X13	22c  PLAYER X13	22d  PLAYER X13	23  3 PLAYER ROD X4	24  2 PLAYER ROD X2	25  5 PLAYER ROD X2
26a  SOCCER BALL X2	26b  SOCCER BALL X2	26c  SOCCER BALL X2	27  BILLIARD BALLS SET X1	28  TRIANGLE X1	29  CUC STICK X2	30  BRUSH X1
31  CHALKS X2	32  X2 (Pre-installed) HOCKEY GOAL	33  GOAL BOX X2	34  LEG LEVELER X4			

35  5/16" x 1-1/2" BOLT X16	36  5/16" WASHER X16	37  1/4" x 1-1/2" BOLT X8	38  1/4" WASHER X8	39  1/4" NUT X6	40  1/4" LOCK NUT X8	41  1/8" x 3/8" BOLT X4
42a  5/32" x 1-1/8" BOLT X26	42b  5/32" x 1-1/8" BOLT X26	43a  5/32" NUT X26	43b  5/32" NUT X26	44  1/8" x 1/2" SCREWS X12	45  3/16" x 3/4" BOLT X8	46  1/8" x 1" BOLT X8
X1  ALLEN WRENCH						

 
STEP 1

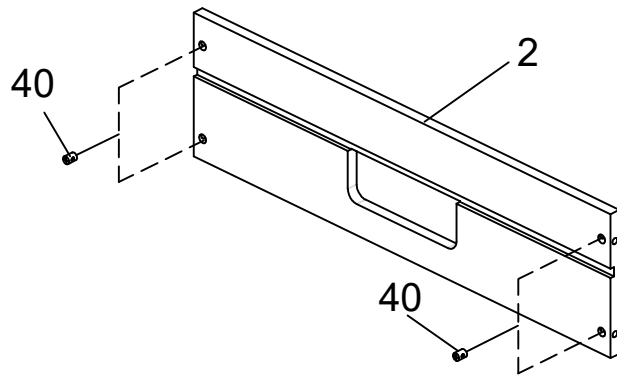

 
STEP 2

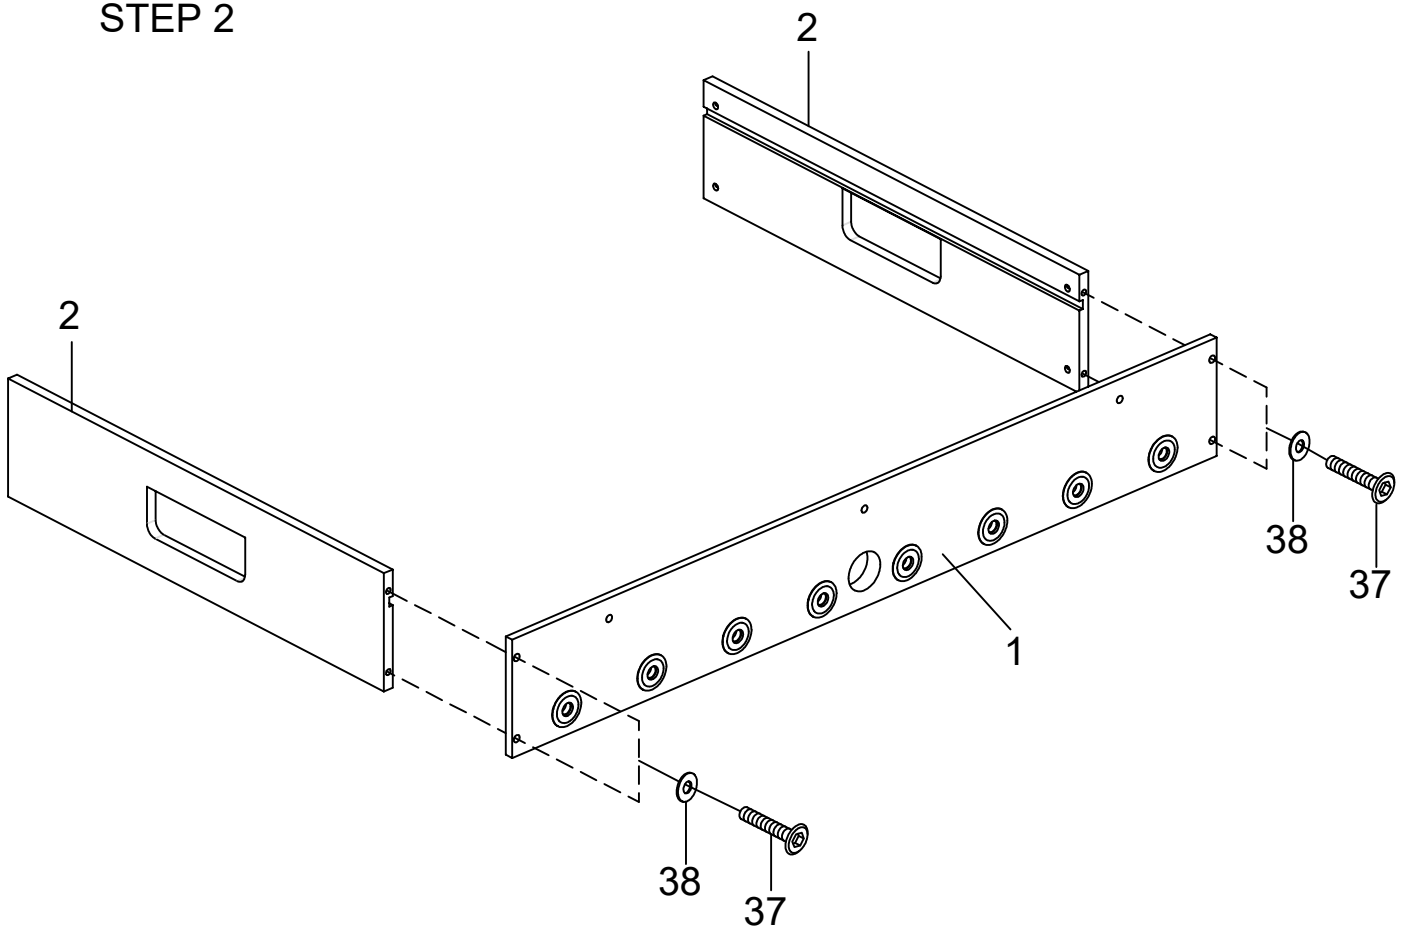

 
STEP 3

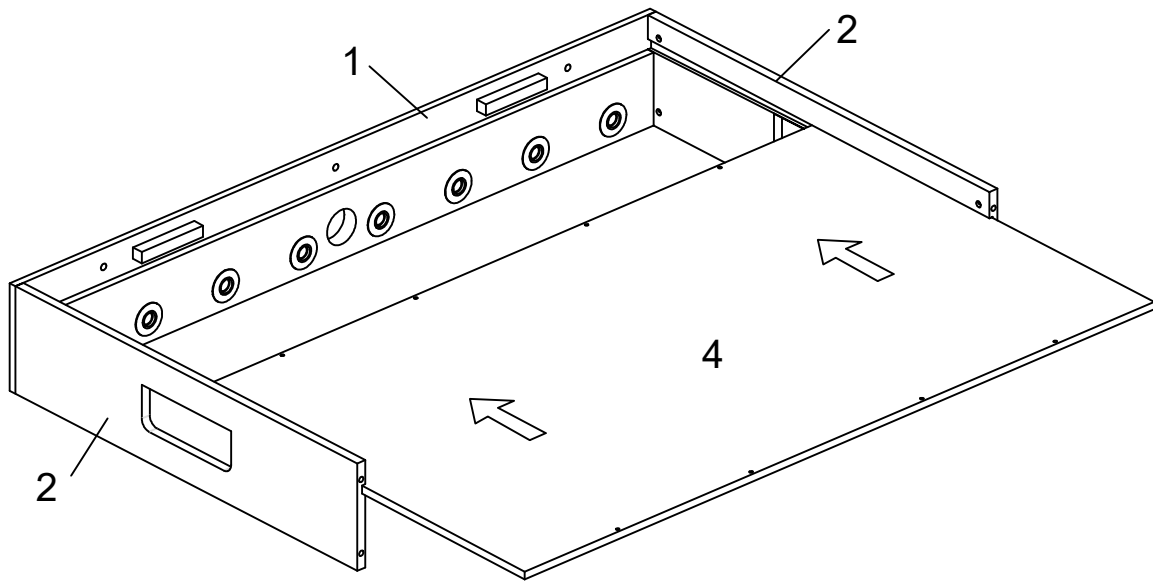

 
STEP 4

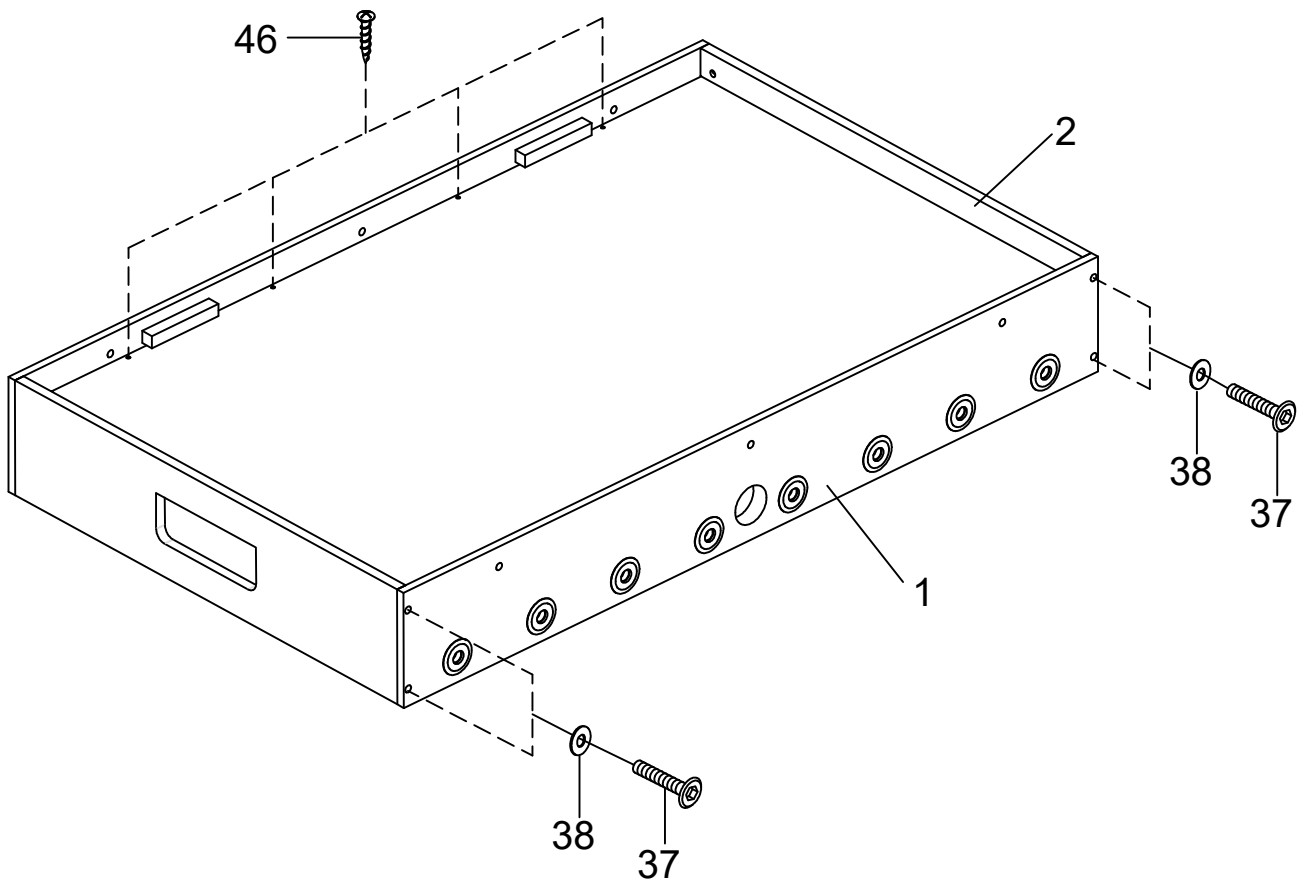

 
STEP 5

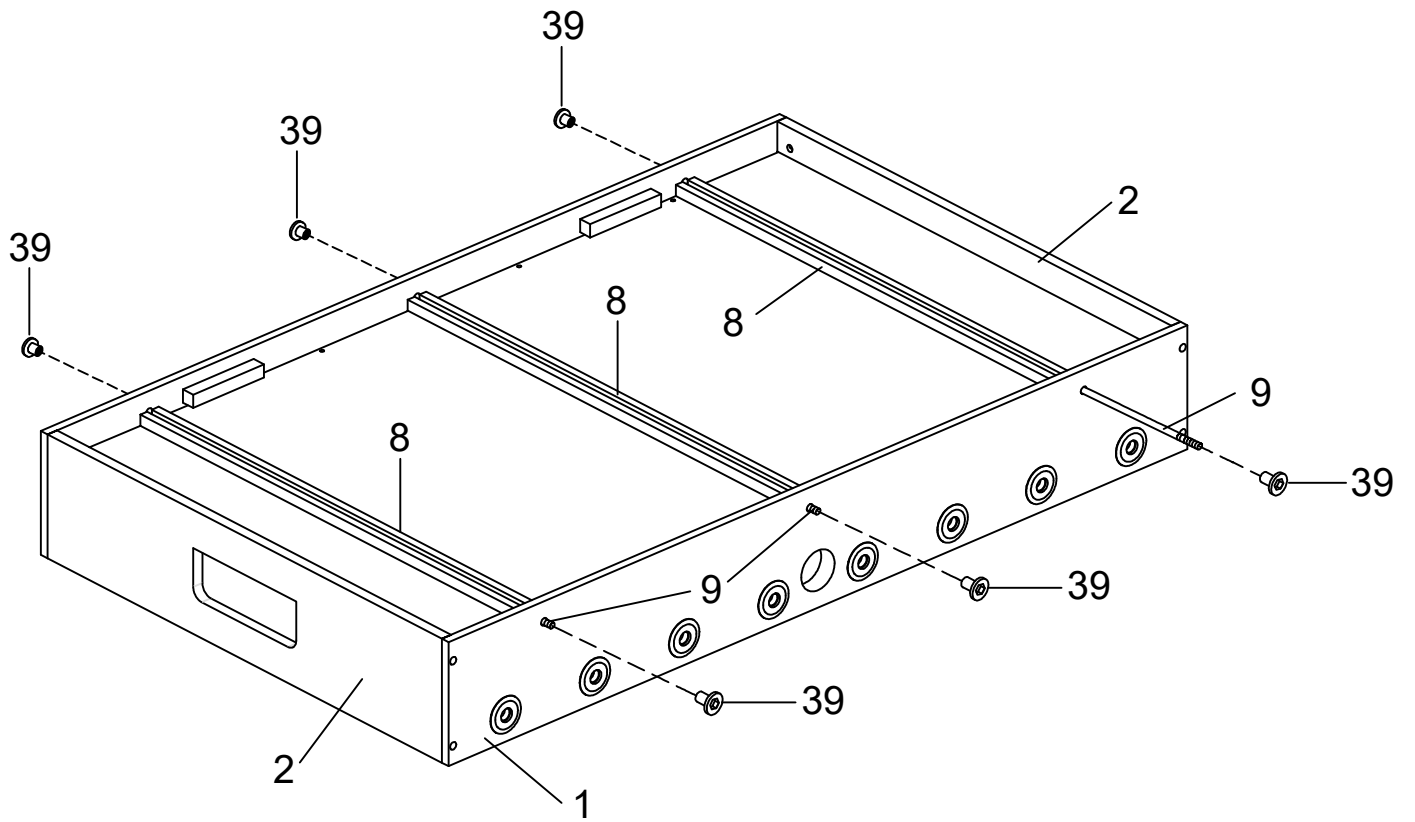

 STEP 6

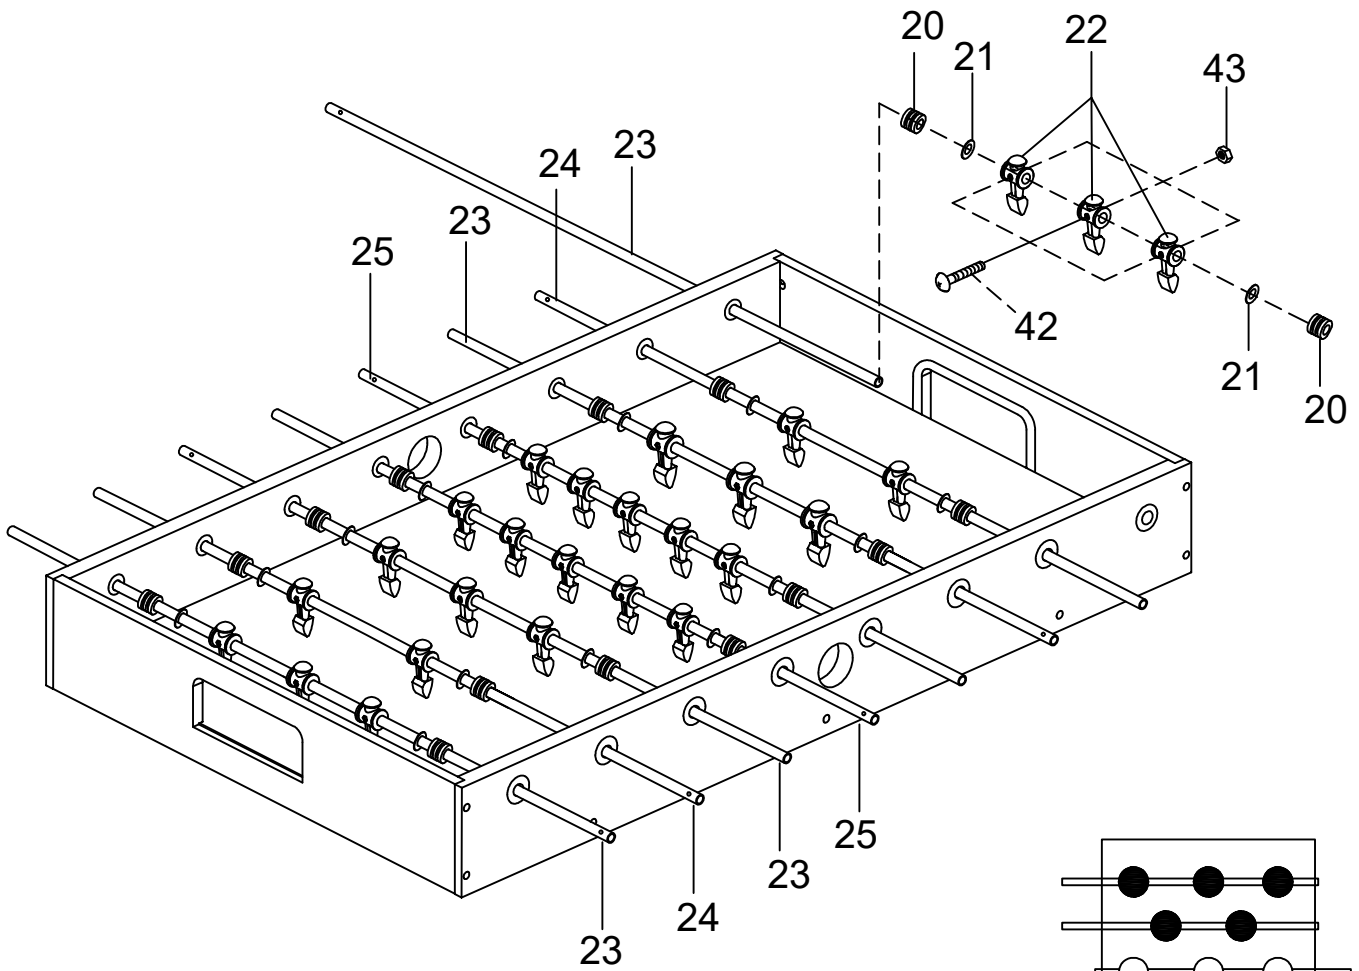


 Insert rod end part way through one side panel, then place rest of parts needed on each rod, in order shown, before inserting through other side panel.

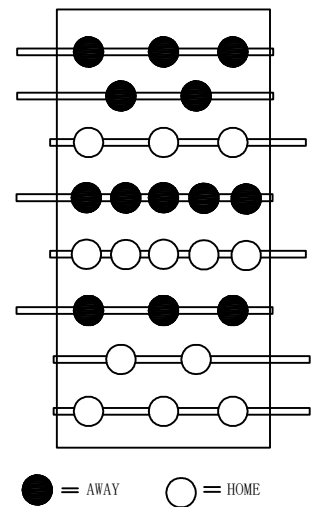


STEP 7A

 
Steps 7A & 7B is an optional if you want to play it with one man keeper.

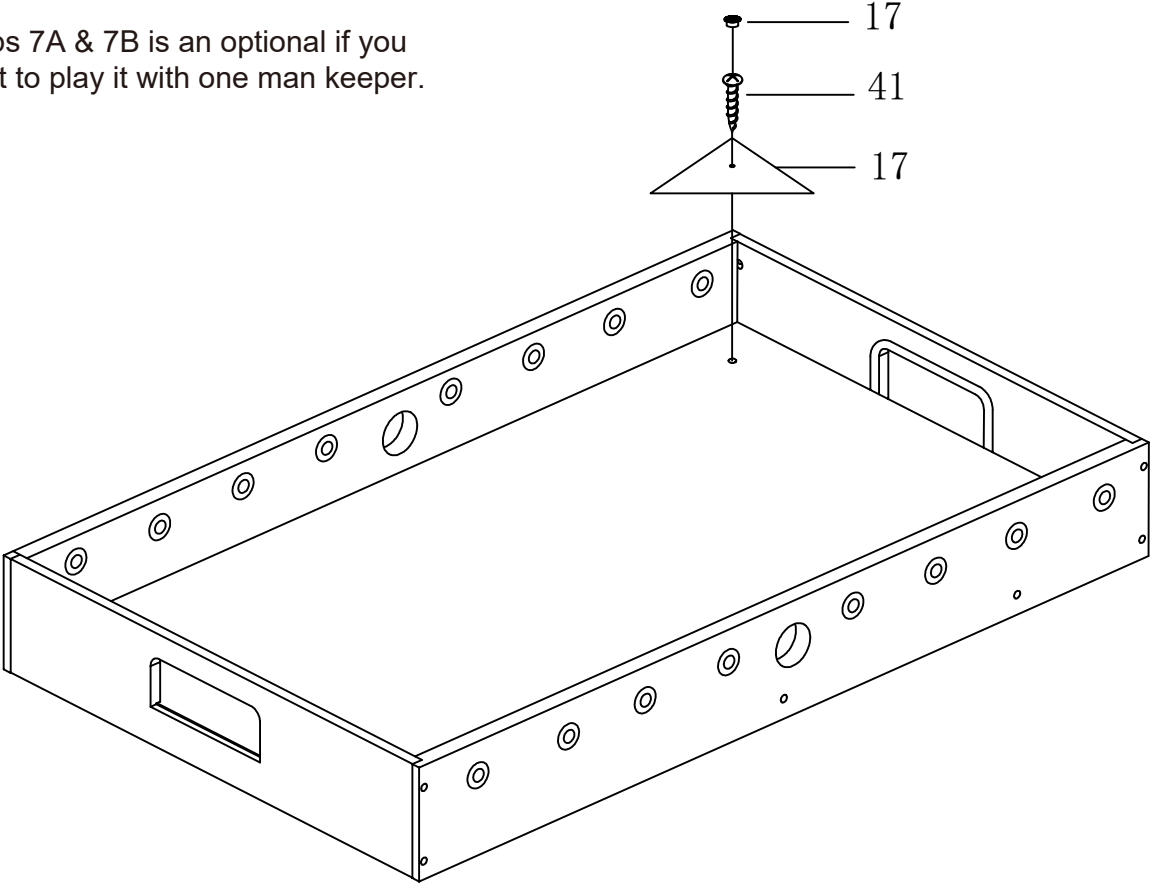

 
STEP 7B

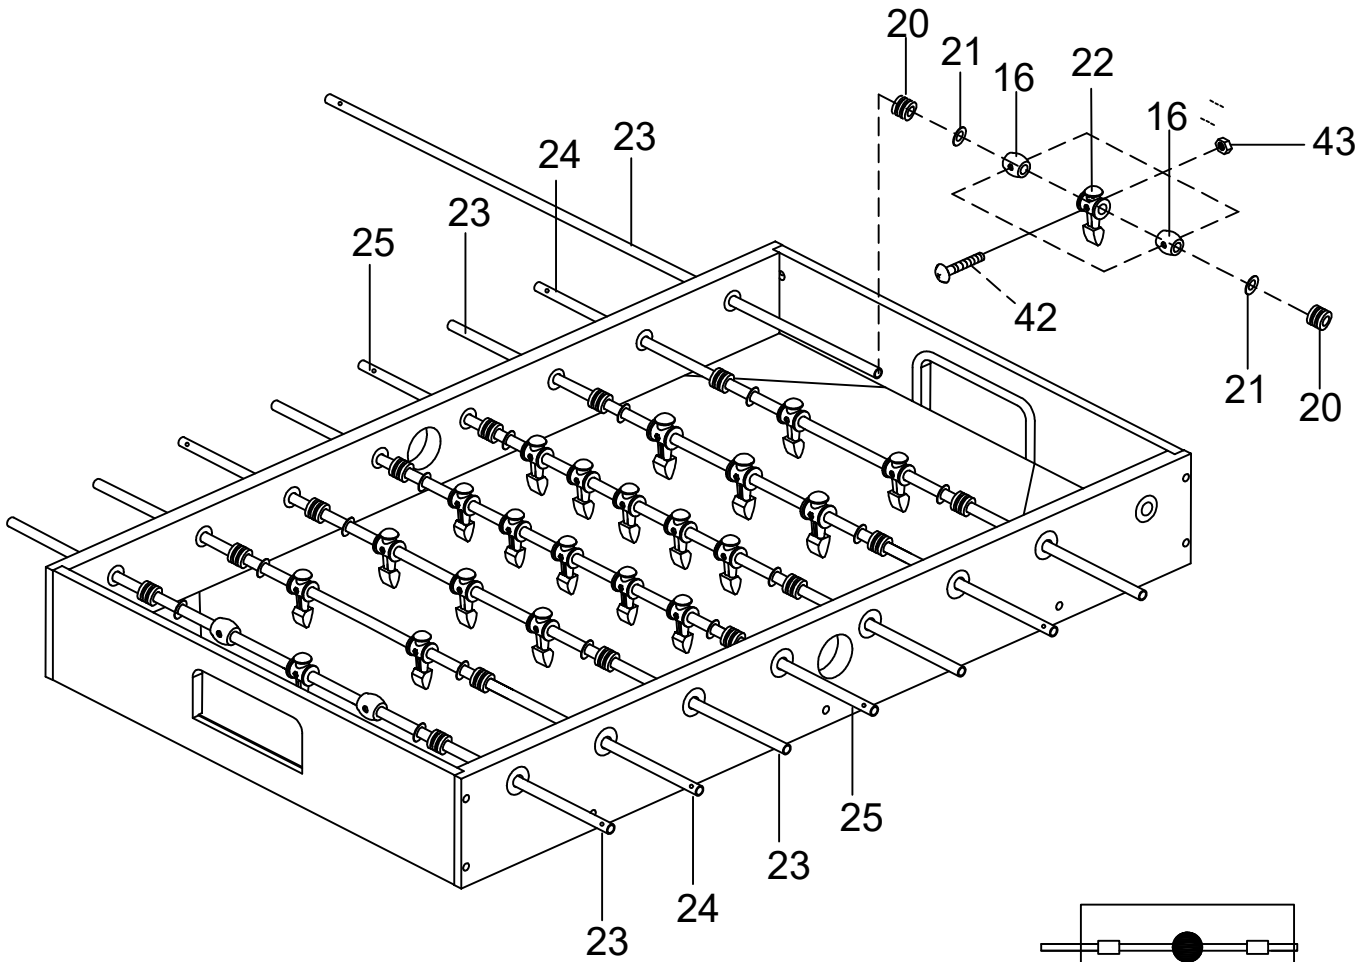

 
Insert rod end part way through one side panel, then place rest of parts needed on each rod, in order shown, before inserting through other side panel.


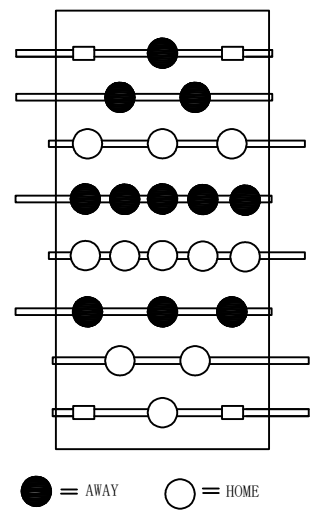



 
STEP 8

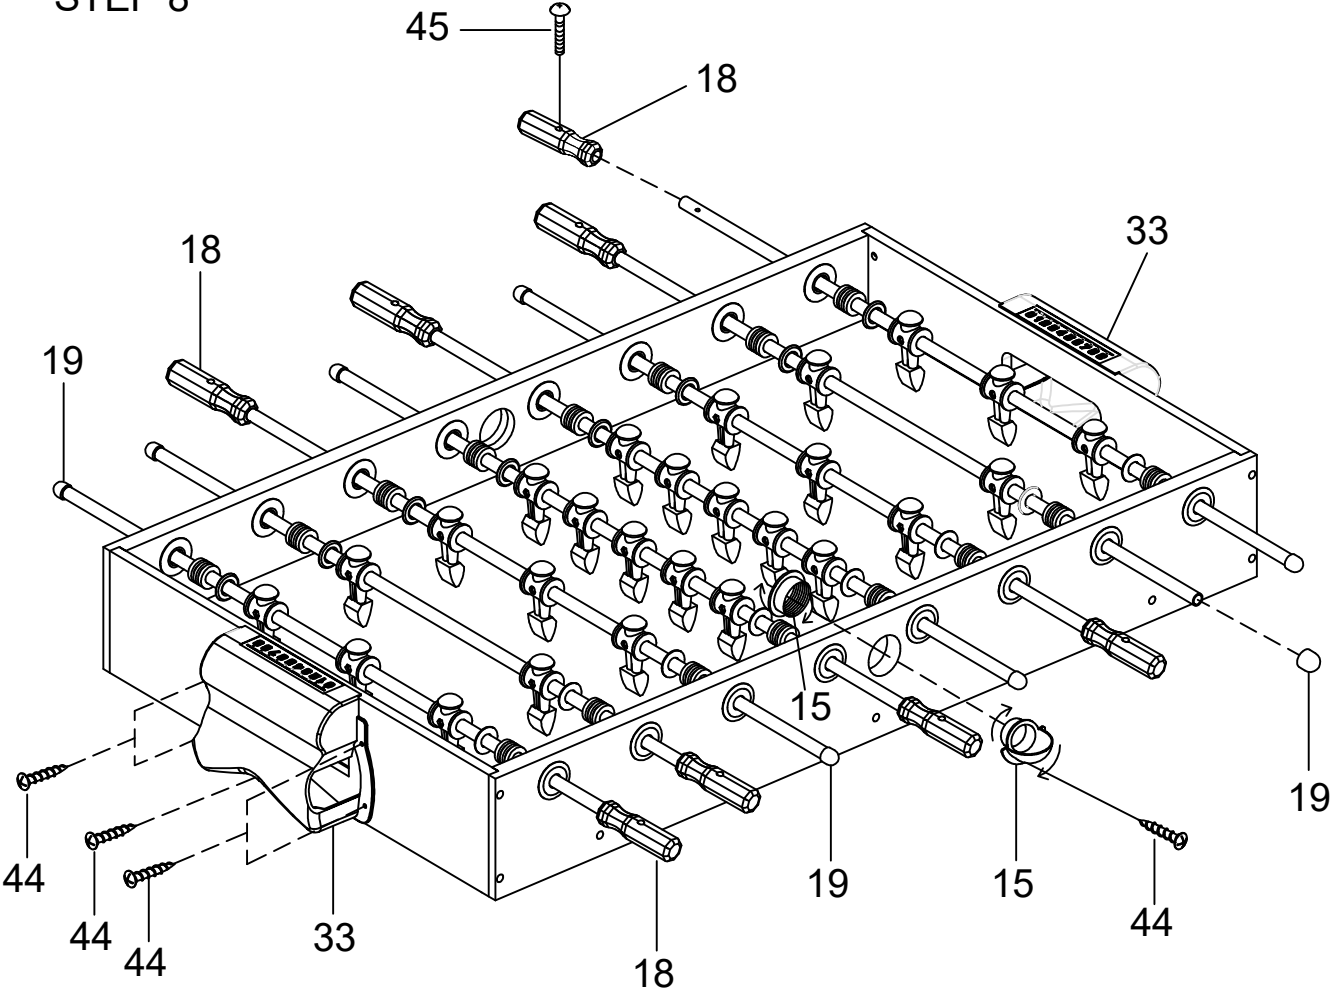

     STEP 9

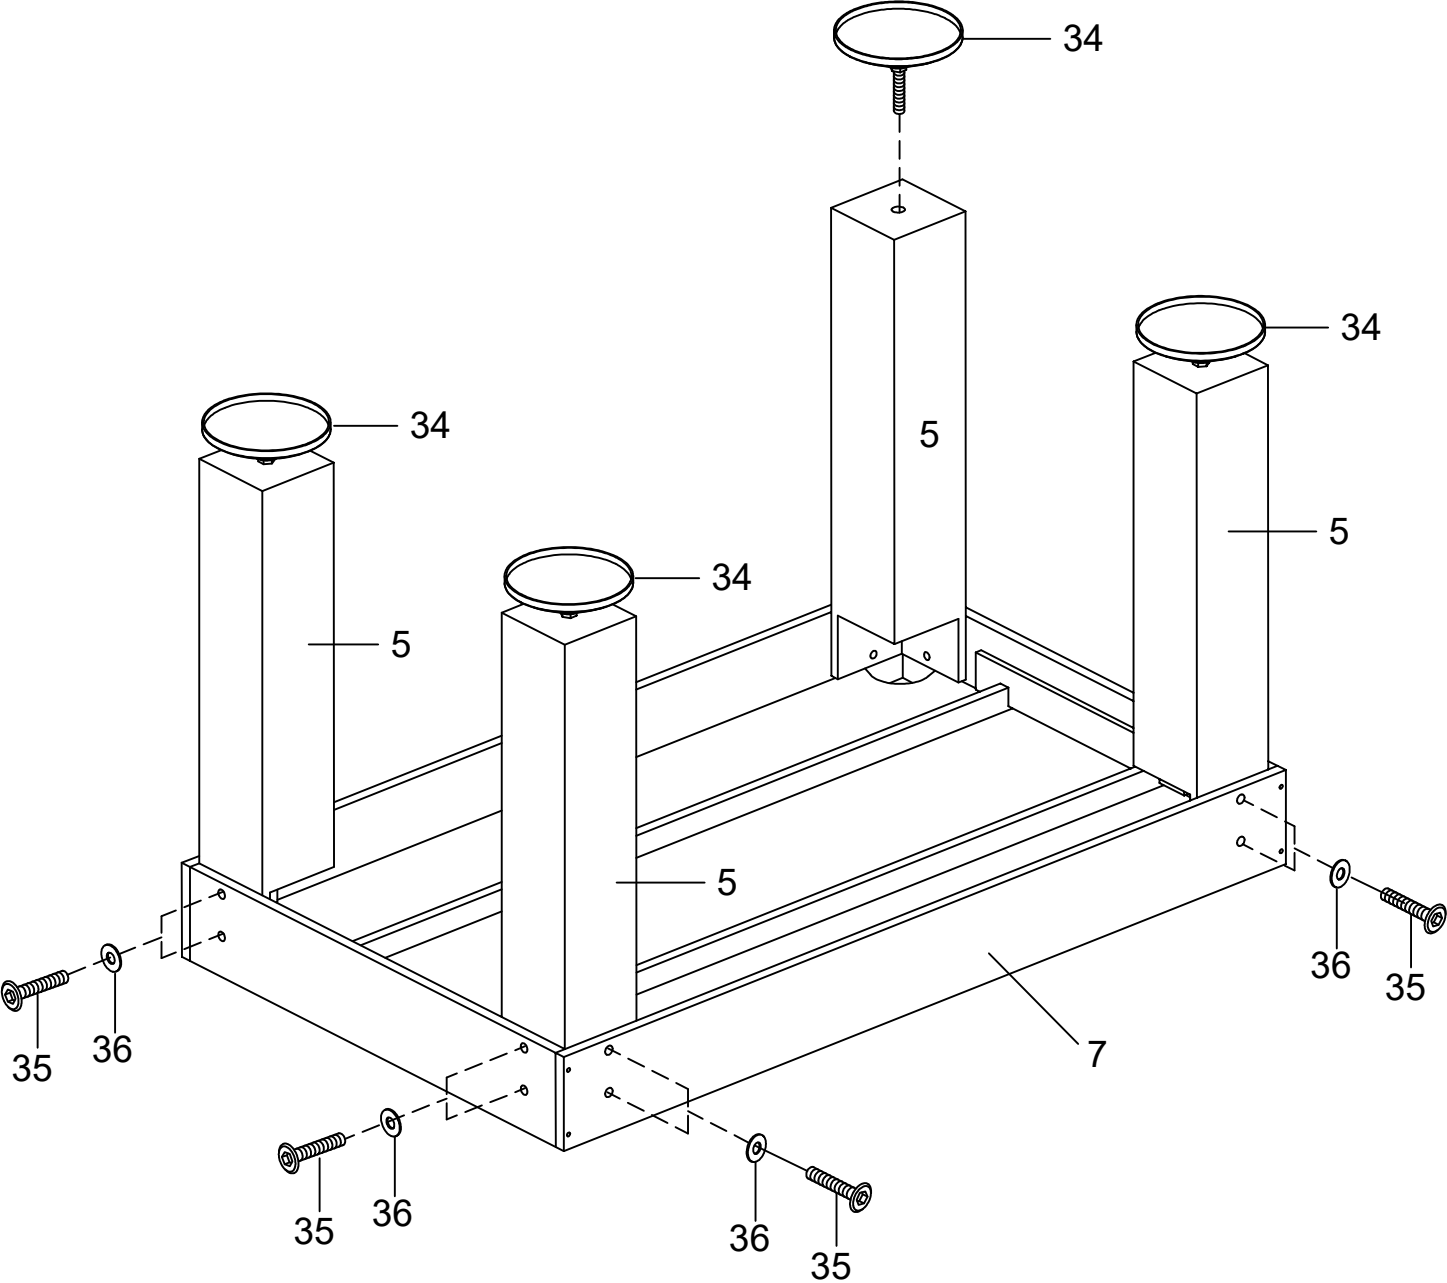

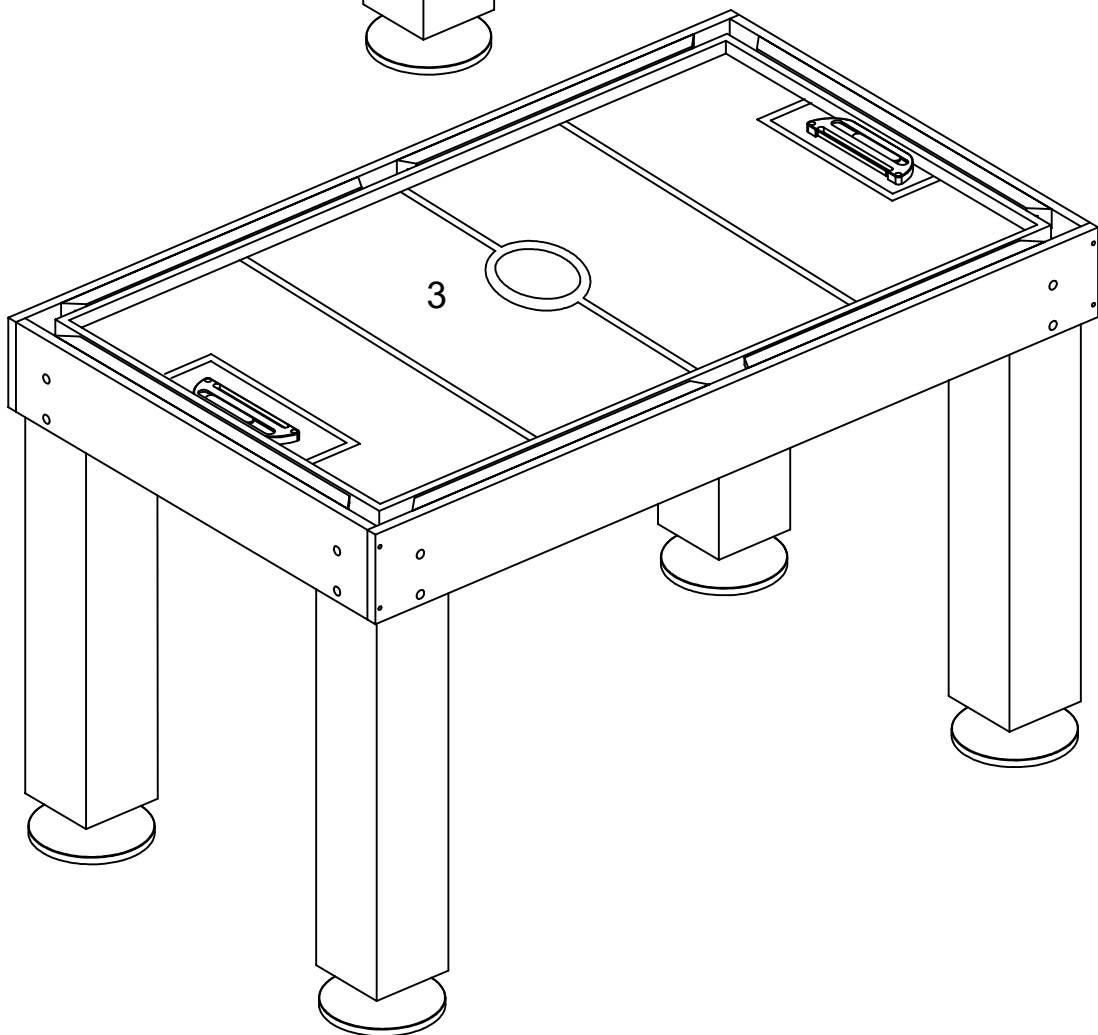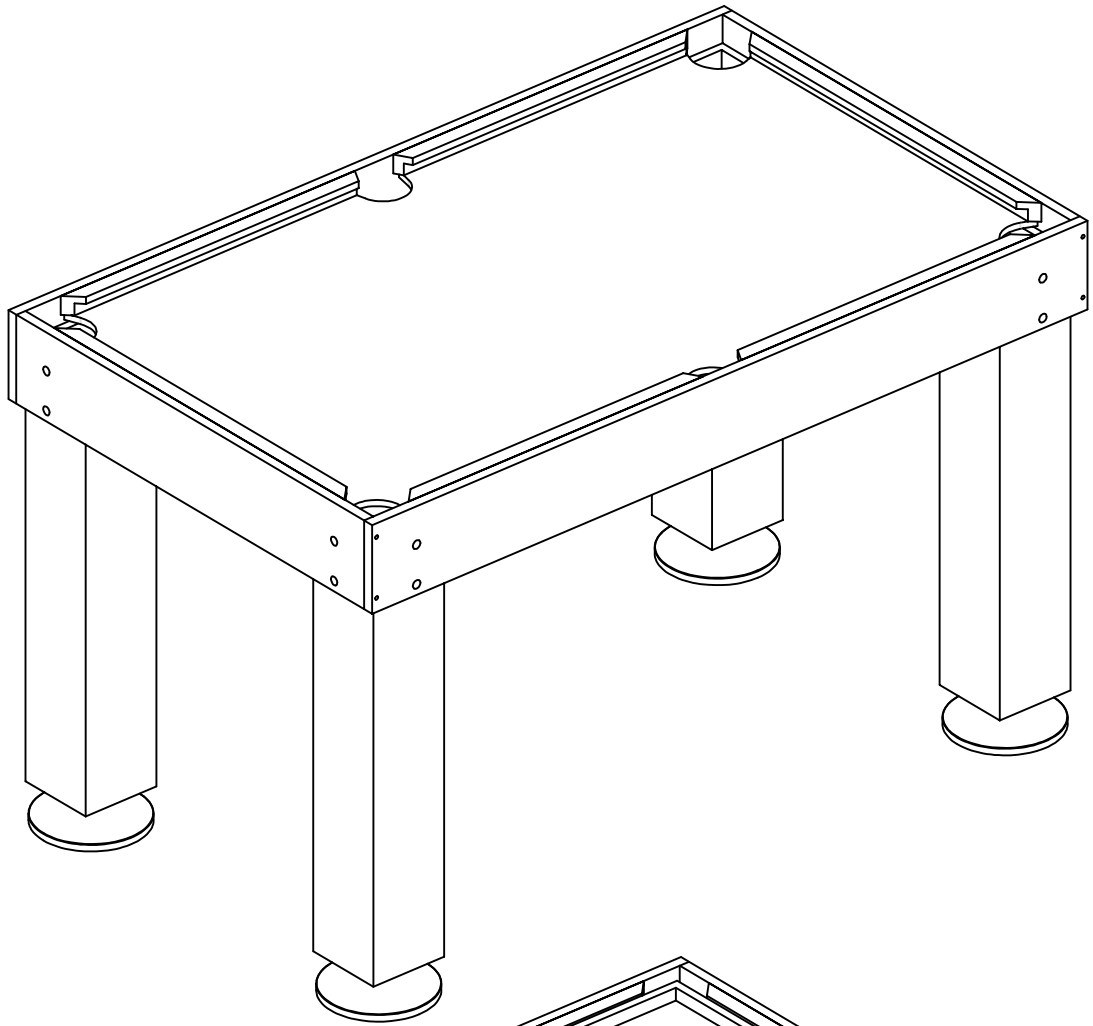

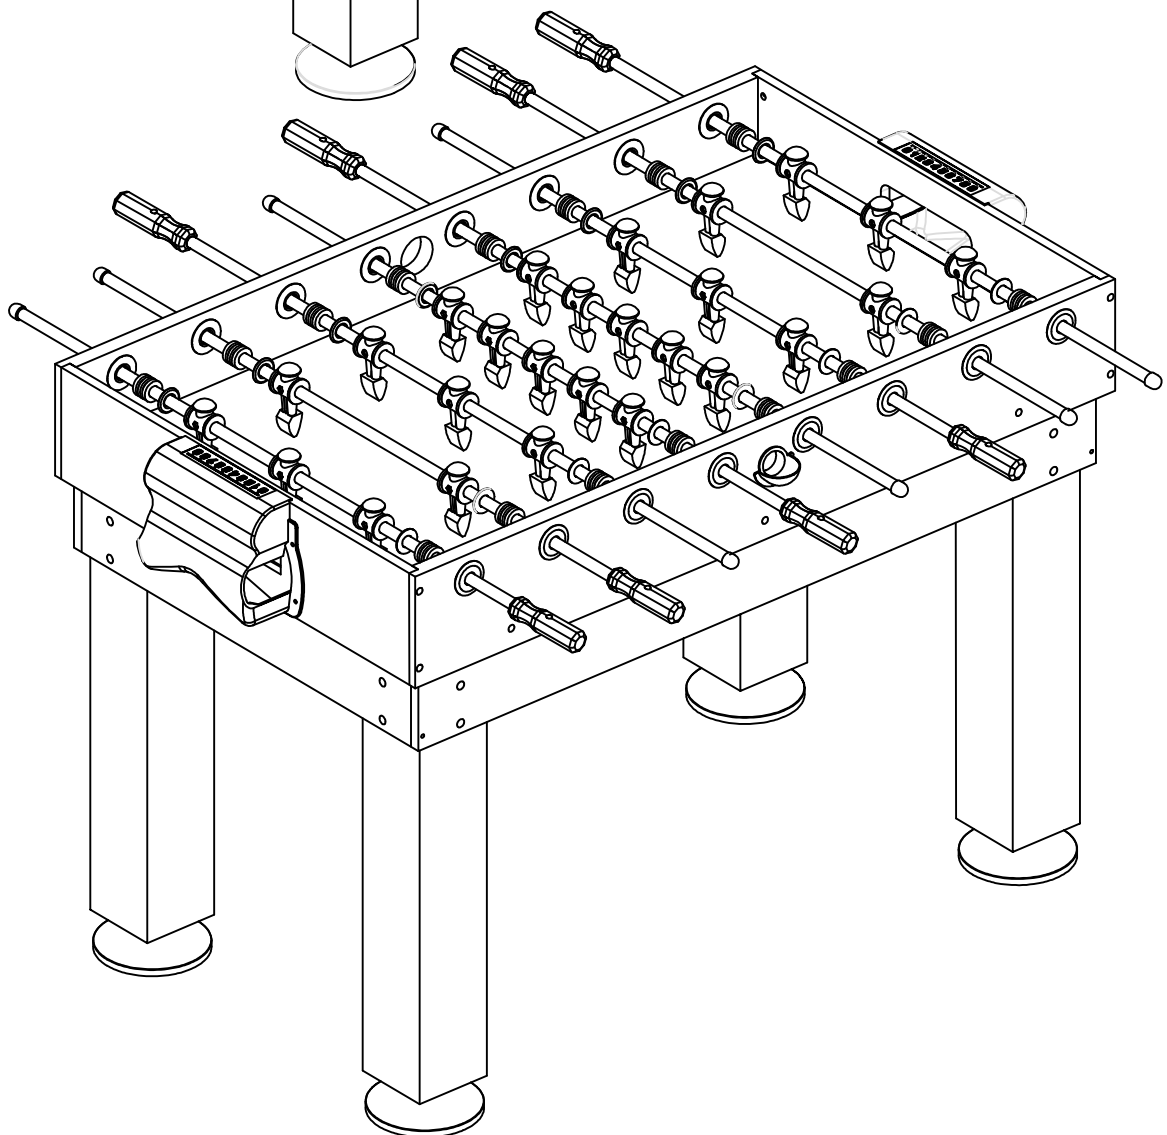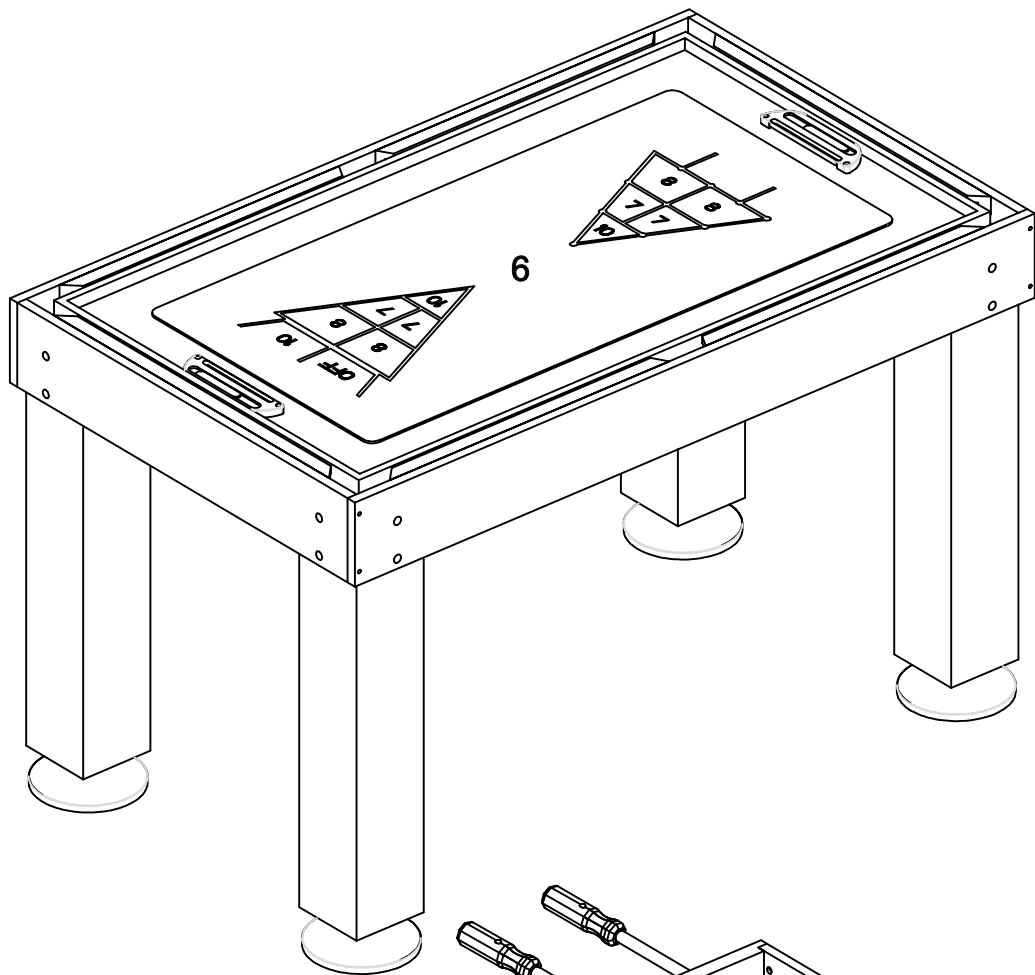

LIFETIME WARRANTY

This product is warranted to the original purchaser to be free from defects in material or workmanship for a period of lifetime from the date of the original retail purchase.

This warranty does not cover defects or damage due to improper installation, alteration, accident or any other event beyond the control of the manufacturer. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover scratching or damage that may result from normal usage.

This product is not intended for institutional or commercial use; the manufacturer does not assume any liability for such use. Institutional or commercial use will void this warranty.

This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, the manufacturer shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are not covered under this warranty.

The manufacturer reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.

The manufacturer shall not be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use to the extent permitted by Federal or state law. Neither the manufacturer nor any of its representatives assumes any other liability in connection with this product.

All warranty claims must be made through the retailer where the product was originally purchased. A purchase receipt or other proof of date of purchase will be required to process all warranty claims. The model number and part numbers found within the assembly instructions will be required when submitting any parts requests or warranty claims.

For further warranty information or inquiries, please call 1-866-844-5425